


Automatic Transmission

SERVICE GUIDE

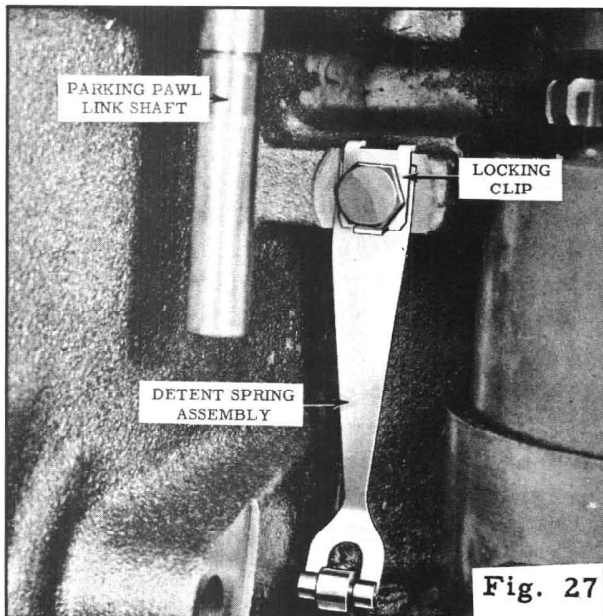

- ⊠ Straighten the lock tabs on detent spring locking clip (Fig. 27). Remove detent spring attaching bolt, clip and detent spring assembly.

THE TRANSMISSION CASE

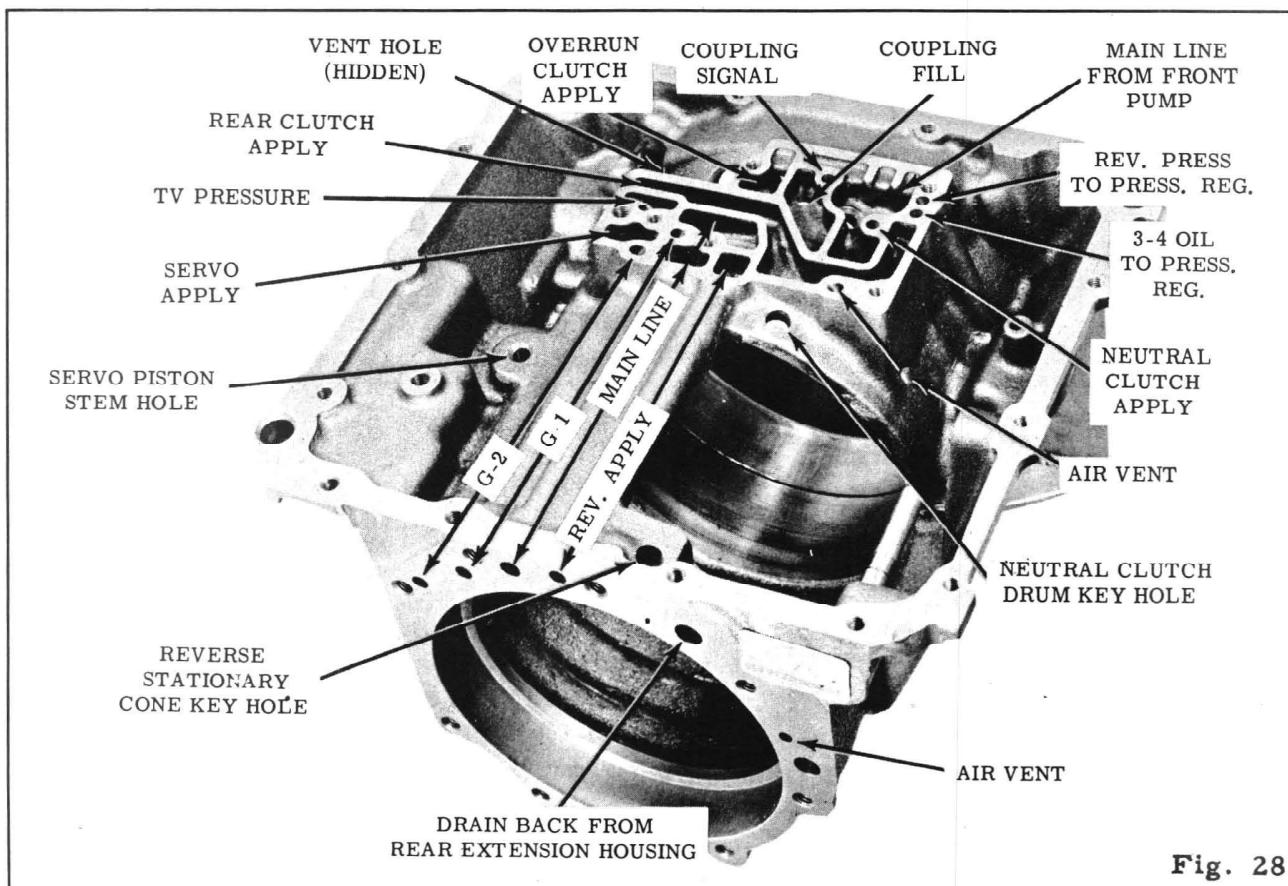


Fig. 28